

Quick Connect

An android application is required to set-up and operate this device:

1. Android device – either tablet or smartphone
2. An account is required. Please contact your supplier for account details
3. **Search for RIFT actuator on Playstore.**



RIFT_Actuators



Rift Actuators



Rift Actuators



01684 368523


 sales@riftactuators.com
www.riftactuators.com

 Shaw House, 110-114
Barnards Green Road,
Malvern, WR14 3ND

Easy Setup Guide

1. Remove Lid



2. Reconnect Battery



3. Insert Cable for Connection




4. Wire for Use 1-10



Pin 1	90-300 Volts – power open
Pin 2	90-300 Volts – power close
Pin 3	90-300 Volts – neutral
Pin 4	90-300 Volts – Ground/Earth
Pin 5	Relay out end of travel confirmation open
Pin 6	Relay out – close
Pin 7	Relay out – neutral
Pin 8	12 – 30 Volts – power open
Pin 9	12 – 30 Volts – power close
Pin 10	12 – 30 Volts - common

5. LED's

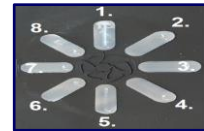

1 + 5	Solid Red – Actuator Closed
1	Flashing orange – Low Battery
2	Flashing Green – Bluetooth Connected
3 + 7	Solid Green – Actuator Open
6	Flashing Red – Manual operation
1+3+5+7	Move Time Out
2+4+6+8	Solid Orange – Torque Limit Reached / Overtorque

6. Touch Pads



1. Left Touchpad – Open

This touchpad is used to open the Actuator. Press and hold or Double tap in quick succession to move open position

2. Middle Touchpad – Close

This touchpad is used to close the Actuator. Press and hold or Double tap in quick succession to move to close position

3. Right Touchpad – Auto / Manual

This touchpad is used to switch between Auto & Manual mode

7. Replace Lid

